



CONTINENTAL EUROPE
GROUNDED ADAPTOR PLUG
WITH USB PORT

#3904

©2016

WJ3904IS01SWJ
6-25-15 panel size 2.5 x 4.5 KG
7/13/15 JB

**IMPORTANT SAFETY INSTRUCTIONS
SAVE THESE INSTRUCTIONS**

Please read these instructions carefully and take care to keep them with the product for future reference.

⚠ CAUTION:

NOTICE:

The multi-adaptor plug module does not convert electrical voltage. Use with appliances operating at 2,200 Watts max. at 220V or 1,100 Watts max. at 110V.

A converter or transformer is required for voltage conversion.

Always check your portable device voltage rating before use. The input voltage of the device you want to connect must match the local power network voltage. If in doubt, seek local expert advice.

If your portable device is SINGLE voltage, you may need a converter or transformer while in a foreign country.

Dual voltage devices can be used with this adaptor if they do not exceed limitations.

For indoor use only.

Do not attempt to use a 110VAC device in a 220/240V AC outlet if the device does not have a dual voltage feature.

Only one portable device should be plugged into the adaptor at one time.

Never use an extension cord with an adaptor.

Never use in combination with another adaptor.

Disconnect the adapter from the receptacle of

the electrical circuit when you are not using it to reduce the risk of electrical shock.

Do not use this adaptor with lamp products containing screw-base lamp holders (sockets) or appliances with extra convenience receptacles. Always attach adaptor plug to your portable device first, then insert into outlet.

For dual-voltage devices only: Before inserting, set portable device switch to the same voltage to the same voltage of the foreign wall socket before use.

On rare occasions, alternative localized systems may be found in some countries. If in doubt, seek local expert advice.

Do not use the adapter if the housing is damaged.

Risk of electric shock. Do not expose the adapter to any kind of liquid or moisture.

Risk of electric or fire shock. Do not replace this plug assembly.

Electrical Ratings:


Multi-Adaptor Plug Module:

- 10A 250V A.C. 50-60Hz

USB Charger Module:

- Input: 100-240V; 50-60Hz; 0.2A

- Output: DC5V; 2100mA

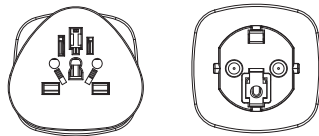

CONTINENTAL EUROPE USB GROUNDED ADAPTOR PLUG

- Accepts most U.S., British, Australian, and New Zealand grounded or non-grounded plugs
- 2.1A USB port recharges & powers smartphones, tablets, and other USB-powered devices
- Fits most wall outlets in Continental Europe*, Middle East, parts of Africa, parts of Asia, and parts of Caribbean
- Recharge and/or power your electronic devices via the USB Port and AC Power Port simultaneously.

CHARGING WITH THE 2.1A USB PORT

1. Once the Grounded Adaptor Plug is inserted into the outlet, connect a compatible USB charging cable to the USB port.
2. Connect the other end of the USB cable to your USB-powered electronic device.
3. Ensure your USB-powered electronic device is in charging mode.



NOTE: USB charging cable is not included. Please make sure a compatible USB charging cable is being used with your device.

Page 4

WJ3904IS01SWJ.indd 4-5

HOW TO MAKE YOUR GROUNDED ADAPTOR PLUG MORE COMPACT FOR TRAVEL (OPTIONAL)

1. With the USB port facing towards the floor, hold the worldwide adaptor section of the Grounded Adaptor Plug in your hand.
2. Push the plug end down until it clicks and separates from the adaptor.
3. To reassemble, align the 3 prongs on the worldwide adaptor section with the 3 holes near the top edge of the plug section and push up until it clicks, locking into place.

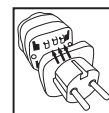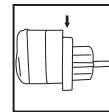

NOTE: On rare occasions, alternative localized systems may be found in some countries. If in doubt, seek local expert advice.



Page 5

7/17/15 3:57 PM



LIMITED WARRANTY

Continental Europe* - Albania, Andorra, Austria, Belarus, Belgium, Bosnia and Herzegovina, Bulgaria, Croatia, Czech Republic, Estonia, Finland, France, Germany, Hungary, Iceland, Latvia, Lithuania, Luxembourg, Macedonia, Monaco, Montenegro, Netherlands, Norway, Poland, Portugal, Romania, Russia, Serbia, Slovakia, Slovenia, Spain, Sweden, Turkey

SWISSGEAR is proud to stand by the quality craftsmanship of its Bags and Accessories. This warranty applies when the product is used under normal conditions for which it is designed. This SWISSGEAR product is warranted to be free from defects in materials and workmanship for a period of three years from the date of purchase. If such a defect occurs, we will, at our option, repair or replace your product upon presentation of the original sales receipt from an authorized retailer, which serves as proof of purchase to validate your warranty. If we determine that an identical replacement is not available, we will provide you with a product of comparable value. This warranty does not cover accidental damages, unreasonable or improper use, normal wear and tear, improper handling or damages caused by a common carrier, loss of use or consequential damages, nor does it cover repairs attempted by unauthorized persons. If a common carrier damages your product, contact them immediately to file a claim. Should you need to return your SWISSGEAR product, please contact our customer service group and have your original sales receipt from an authorized retailer available in order to obtain a return authorization for your repair or replacement. All returns must be sent to us postage or freight prepaid. This warranty gives you specific legal rights, and you may also have other rights which may vary from country to country.

SWISSGEAR® is a registered trademark of Wenger S.A.
©2016 Wenger NA ALL RIGHTS RESERVED.
ALL CONTENT IS EXCLUSIVE TO WENGER SA.

Group III International Inc.
Official Licensee of Wenger Licensing

For Customer Service:
customerservice@groupiii.com
WJ3904IS01SWJ